




Installation Commissioning & Operation

SmartTerminal

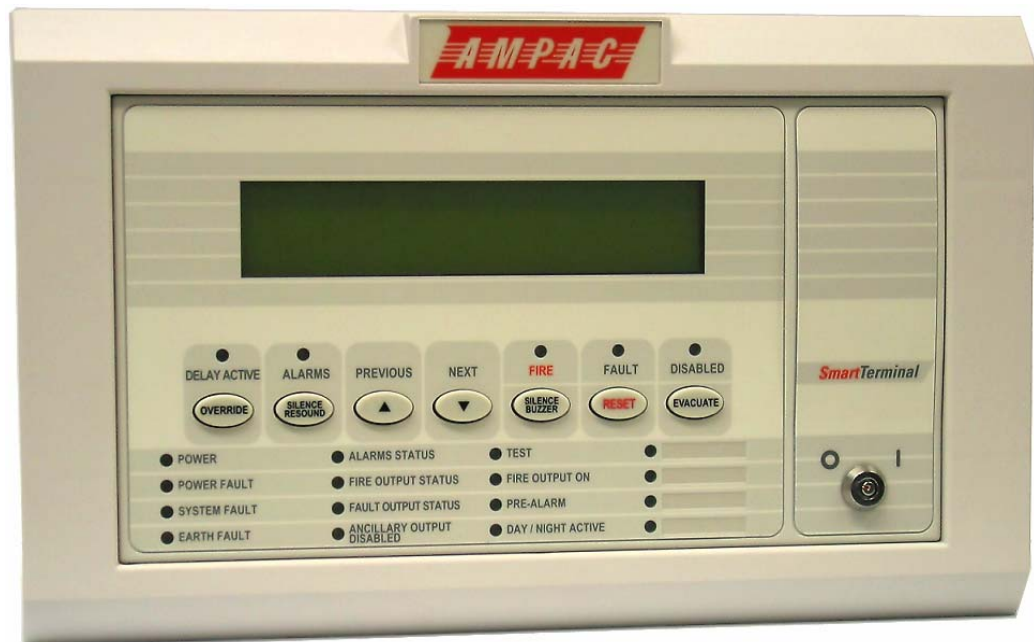

EN54: Parts 2 & 4 1997

Liquid Crystal Display Annunciator

“ Our aim is to provide ‘ *Consistently Excellent Service* ’ in the eyes of our customers ”

Table of Contents	Page No.
1 Introduction.....	1
2 Operation.....	1
2.1 Power Up	1
2.2 Normal.....	1
2.3 Fault	1
2.4 Access levels	1
3 Specifications	2
3.1 Overview	2
4 Operational & Key Features.....	3
4.1 Features	3
5 Mechanical	3
5.1 Mounting the Enclosure	3
5.1.1 Enclosure Details.....	3
5.1.2 Fixing the Chassis to the Wall	4
5.1.3 Board Removal / Replacement.....	4
5.1.4 Removing the Knockouts.....	4
6 Installation & Cabling.....	5
6.1 <i>SmartTerminal</i> Termination Board Interconnection	7
6.2 FACP Communications Extender Board Interconnection.....	7
6.3 Setting the <i>SmartTerminal</i> Address.....	7
6.4 Setting the <i>SmartTerminal</i> Annunciator in ConfigManager	8
6.4.1 Setting the <i>SmartTerminal</i> Reporting Parameters	8
7 <i>SmartTerminal</i> Controls.....	9
7.1 Override	9
7.2 Silence / Resound	10
7.3 Previous	10
7.4 Next.....	10
7.5 Silence Buzzer	10
7.6 Reset.....	10
7.7 Evacuate	10
7.8 Key Switch	11

8	SmartTerminal Indicators	11
8.1	Introduction	11
8.2	Delay	11
8.3	Alarms	11
8.4	Fire	11
8.5	Fault	11
8.6	Disabled	11
8.7	Power	12
8.8	Power Fault	12
8.9	System Fault	12
8.10	Earth Fault.....	12
8.11	Alarm Status.....	12
8.12	Fire Output Status	12
8.13	Fault Output Status	12
8.14	Ancillary Output Disabled.....	12
8.15	Test	12
8.16	Fire Output On	12
8.17	Prealarm.....	12
8.18	Day / Night Active	12
8.19	Programmable.....	12
9	SmartTerminal Screen Format	13
9.1	Introduction	13
9.2	Alarm	13
9.3	Fault	13
9.4	Device Isolate / Disables.....	13
9.5	Pre-alarm	13
9.6	Normal / Default	14
9.7	Config.....	14
10	Trouble Shooting Chart.....	14

1 Introduction

SmartTerminal connects to the **FireFinder™** Fire Alarm Control Panel (FACP) via the RS485 multidrop communication port. Generally it is designed to be used anywhere where the status of the FACP is required to be monitored by local personnel and limited control is required.

SmartTerminal;

- ✓ Has front panel controls that allow the resetting of alarms and activation/silencing of alarm devices. Enabling operational access to the controls is via a key-switch;
- ✓ reports events from devices that are accessible to the host FACP. For example if the host FACP is configured with global access then the connected **SmartTerminal** reports events from all devices. If the host FACP is configured as local then the connected **SmartTerminal** reports events from devices that are directly connected to the host FACP.

2 Operation

The operation of **SmartTerminal** can be considered to be in one of three states, these are;

1. power up - when the **SmartTerminal** is *initialising*
2. *normal* - when the **SmartTerminal** address has been set and is communicating with the FACP, reporting normal / abnormal conditions and controlling the FACP via the front panel controls
3. *fault* where the **SmartTerminal** is in fault and/or is unable to communicate with the FACP.

2.1 Power Up

The LCD displays a message telling the operator **SmartTerminal** is being powered up and that the hardware is being initialised. Once the hardware has been successfully initialised set the address and **SmartTerminal** should automatically transition to the normal state. Should a failure occur on power up press the "RESET" button located on the LCD PCB (see *Figure 4*) and check the address is correct.

2.2 Normal

The Normal state is entered from the "Power-up" or a return from the "Fault" state and is displayed on the LCD if the **SmartTerminal** is communicating with the FACP and operating correctly. In this state the front panel Power indicator is illuminated.

2.3 Fault

SmartTerminal enters the Fault state upon;

1. a hardware failure
2. LCD module failure or
3. a loss of communications with the FACP (indicated by the "DIAGNOSTIC" LED – not flashing and the "no communications " message being displayed)

In a Fault condition the front panel NORMAL indicator is extinguished and the details of the fault are displayed on the LCD. The FACP will also indicate a fault in a similar manner.

2.4 Access levels

There are two levels of access.

Access level 1 only the silence buzzer, previous and next front panel controls are operative. All other controls operate in access level two.

Access level 2 is entered when the key-switch is in the ENABLED position.



Figure 1: Keyswitch in the Disabled / Enabled Postions


3 Specifications

<u>Mechanical</u> Dimensions ABS Cabinet: (mm) Weight (without batteries)	195H x 324W x 52D 2.5Kg
<u>Environmental</u> Temperature: Humidity:	-5°C to + 55°C 25% to 75%
<u>Input Power</u> Operating Voltage (nominal): Operating Voltage (minimum): Quiescent Current @ 26.5VDC: Maximum Current: Cabling Requirements: Optional 27VDC Power Supply: Batteries (2 X 12Volt):	27VDC 18VDC 12.4mA (back light off, buzzer off") 43.8mA (back light on, buzzer on) 2 core 1.5 to 2.5mm ² 1.8A plus 400mA Battery Charging 3.2Ahr
<u>27VDC Outputs</u> Auxiliary 27VDC Distribution: Cabling Requirements:	24VDC 500mA Monitored 2 core 1.5 to 2.5mm ²
<u>Communications</u> Internal to FACP: External to FACP: Cabling Requirements: Fault monitoring: Maximum Number of SmartTerminal per FACP: Maximum Distance (from FACP):	RS485 RS485 Twisted shielded pair plus shield O/C, S/C 30 1.2Kms.
<u>LCD</u>	4 line X 40 characters - backlit

3.1 Overview

SmartTerminal essentially consists of three PCBs, one in the FACP and two within **SmartTerminal**;

1. BRD82CEB2 – FACP – Communications Extender Board (Item Number 159-0129)
The Communications Extender Board is mounted inside the FACP and provides the protected RS485 communications and 27VDC to the **SmartTerminal** Termination Board/s and LCD/s.
2. BRD82LTB2 – Termination Board
A Termination Board is mounted in each **SmartTerminal** to protect and interface the RS485 communications and 27VDC supply to the LCD Board
3. BRD82ICC2 – Control, LCD Communications and LCD Driver Board

 **Note:** A maximum of 30 **SmartTerminals** may be connected to the communications bus over a distance of approximately 1.2Kms

4 Operational & Key Features

SmartTerminal has been designed for use with the **FireFinder™** series of FACP's.

4.1 Features

- 4 line by 40 character LCD with backlight and navigation keys ▲ ▼ keys allow the **SmartTerminal** to be used for FACP operation and interrogation. Note the backlight is only energised when alarms are present, a key has been pressed or controls enable key switch is enabled
- Buzzer and system Reset.
- Flush or surface mountable enclosure.
- Controls have tactile and audible feedback of operation.
- All terminals cater for 2.5mm cables.

5 Mechanical

SmartTerminal is supplied in a ABS cabinet and consists of;

1. The Main Card, with all controls and indicators mounted directly onto it
2. 1 X LCDA Termination Board
3. 1 X ABS door keys
4. 2 X 1502 control Enable / Disable keys



Note: A Communications Extender Board will be required.

The front door of the ABS version is locked by way of two clips on the right hand side of the cabinet. A special locating key which has two raised pins that are inserted into the side of the cabinet unlocks the door.

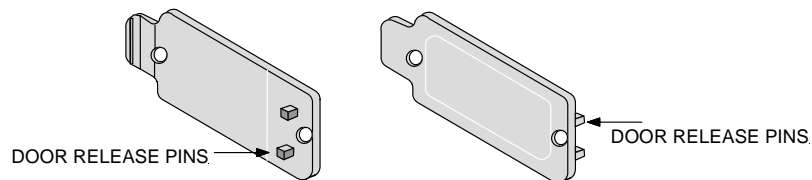


Figure 2: ABS Door Key

5.1 Mounting the Enclosure

The panel **MUST** be mounted in an area that is **NOT** subject to conditions likely to affect its performance, e.g. damp, salt-air, water ingress, extremes of temperature, abuse etc. is at an easily accessible height and such that the indicators are at eye level.

Typical locations for the panel are the first and most obvious point of contact for emergency services or a security office that is likely to be permanently staffed.

5.1.1 Enclosure Details

The **LCDA** can be surface or semi-flush mounted, is supplied with a detachable front door, mountable back box and a minimum of two separate PCBs.

5.1.2 Fixing the Chassis to the Wall

Taking into account the weight of the panel securely mount it by using the three keyhole mounting holes in the backpan, two in the top and one in the bottom. Use suitably sized screws and plugs for the type of mounting surface.

Caution: Any dust or swarf created during the fixing process must be kept out of the cabinet and great care should be taken not to damage any wiring or components.

5.1.3 Board Removal / Replacement


If a PCB has to be removed the following precautions should be observed;

1. Removing the door will provide better access to the boards and will ensure the hinges are not accidentally stressed.
2. Personal anti- static procedures must be followed.
3. When disconnecting the RJ45 style connecting cable from the PCB, make sure that the cable remains connected to at least one board to prevent it being misplaced.



Note: Care should be taken when detaching this connector as it is necessary to depress the small locking tab to unlock the connector from its base. To reconnect the cable the connector must first be correctly aligned then pushed into the socket so it locks into position.

4. Carefully remove the retaining screws at each corner of the board taking care not to damage any of the components.
5. Place each board into anti- static storage once removed.

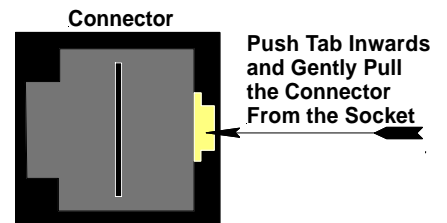

5.1.4 Removing the Knockouts

The knock-outs should be removed with a sharp tap in the rim of the knock-out using a flat broad-bladed screwdriver. *Note: Use of excessive force could damage the enclosure around the knock-out.*
Note: Any unused knock-outs must be securely blanked off.

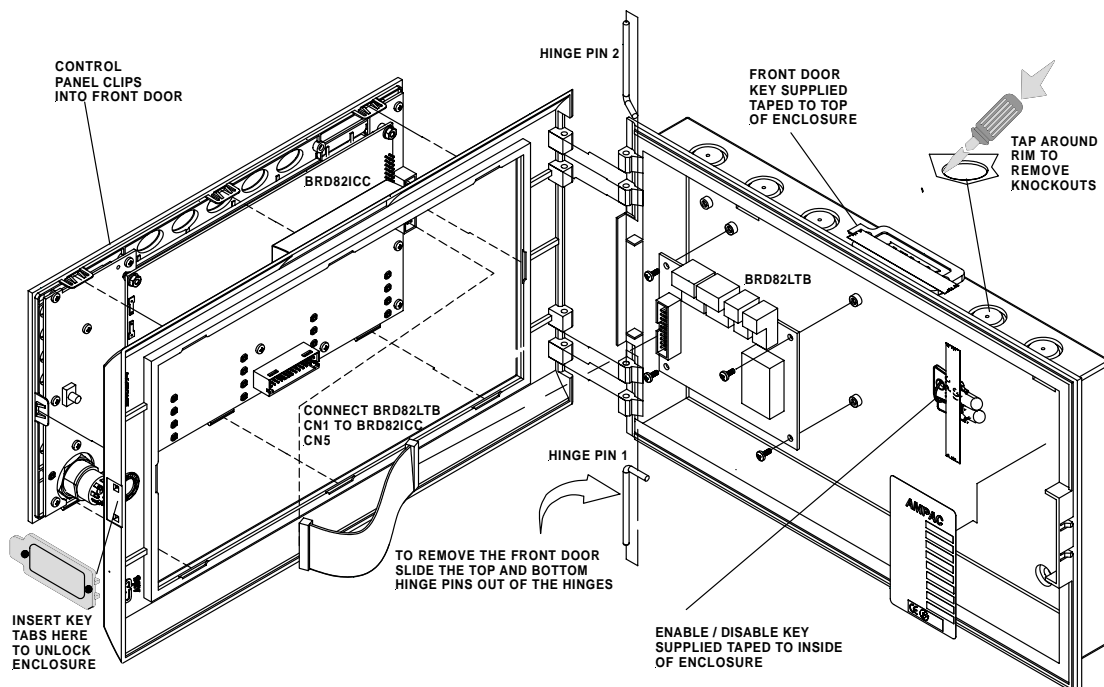


Figure 3: Exploded View

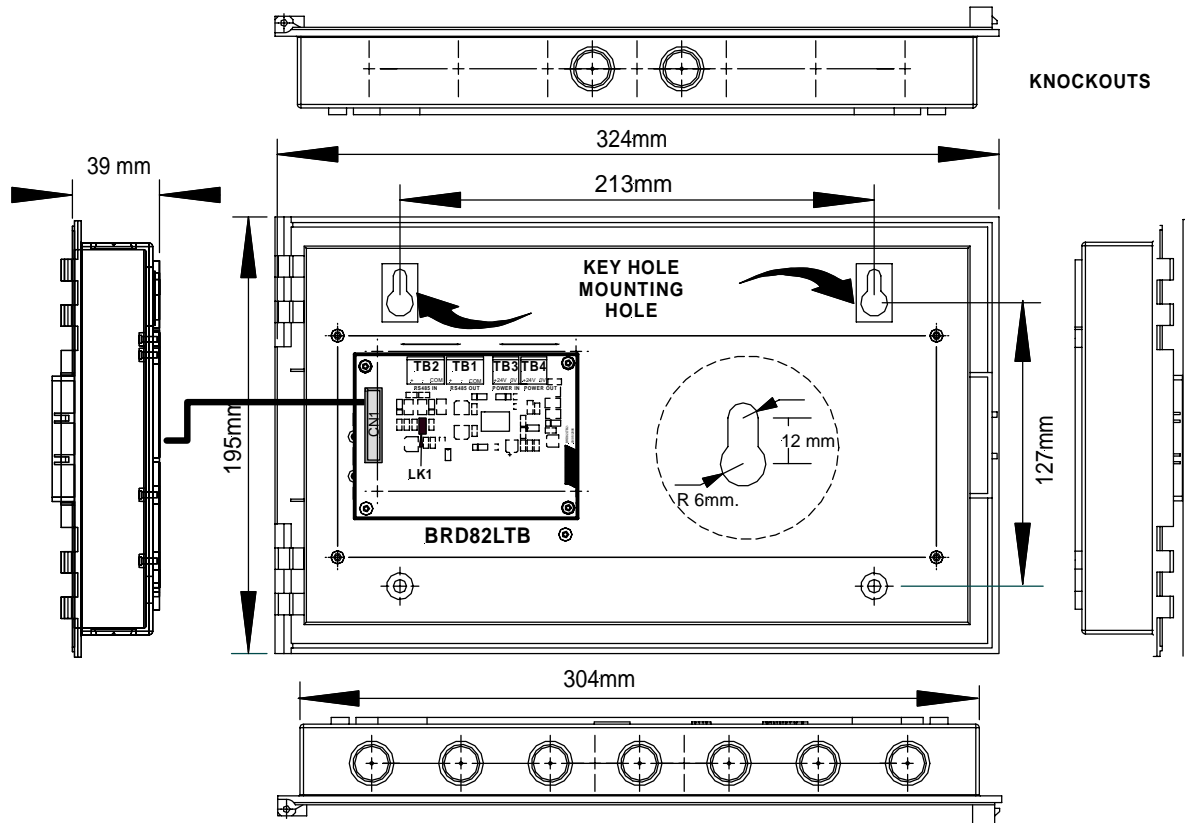


Figure 4: Typical Layout (Externally Powered) and Location of Keyholes

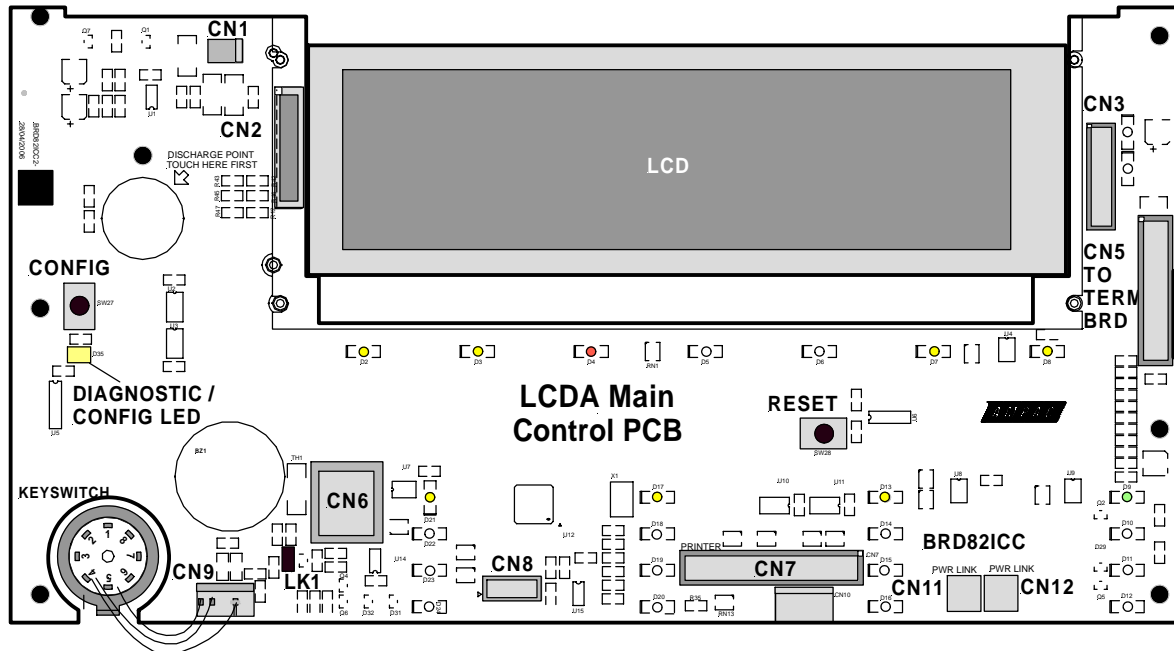


Figure 5: LCD Printed Circuit Board Layout

6 Installation & Cabling

The Communications Extender Board (Item Number 159-0129) should be mounted into the FACP and cabled as shown below.

It should be noted the Communications Extender Board and its supporting plate is mounted in a piggy back fashion onto one of the loop / zone boards.

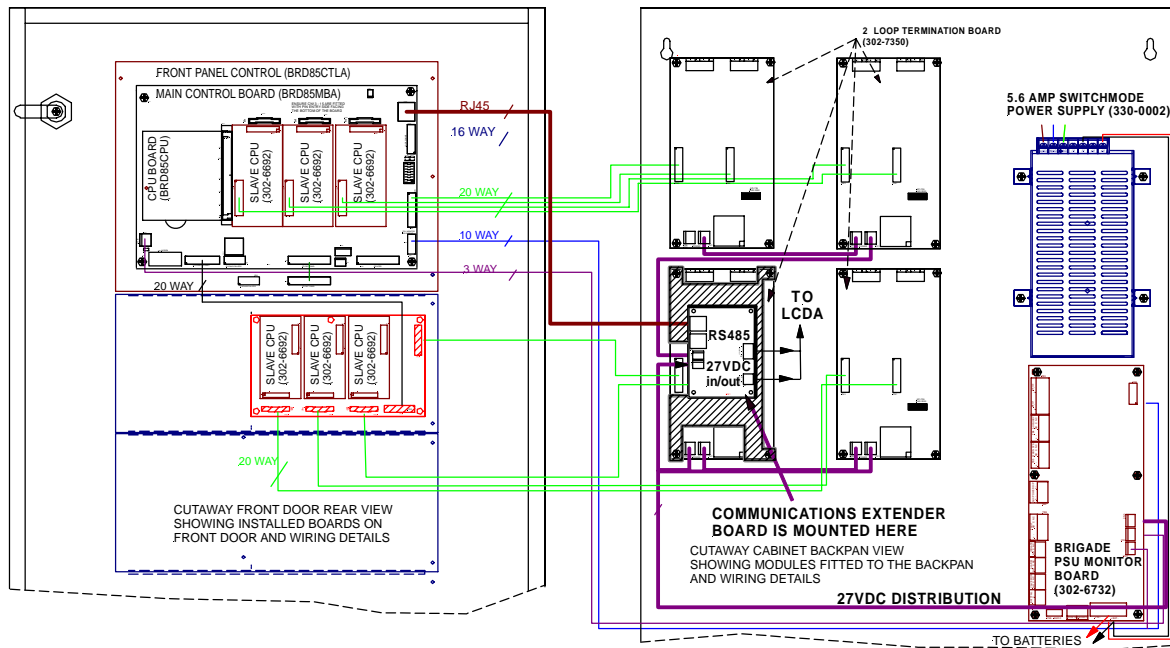


Figure 6: FACP Internal Layout

The **SmartTerminal** is then connected to the FACP as shown below.

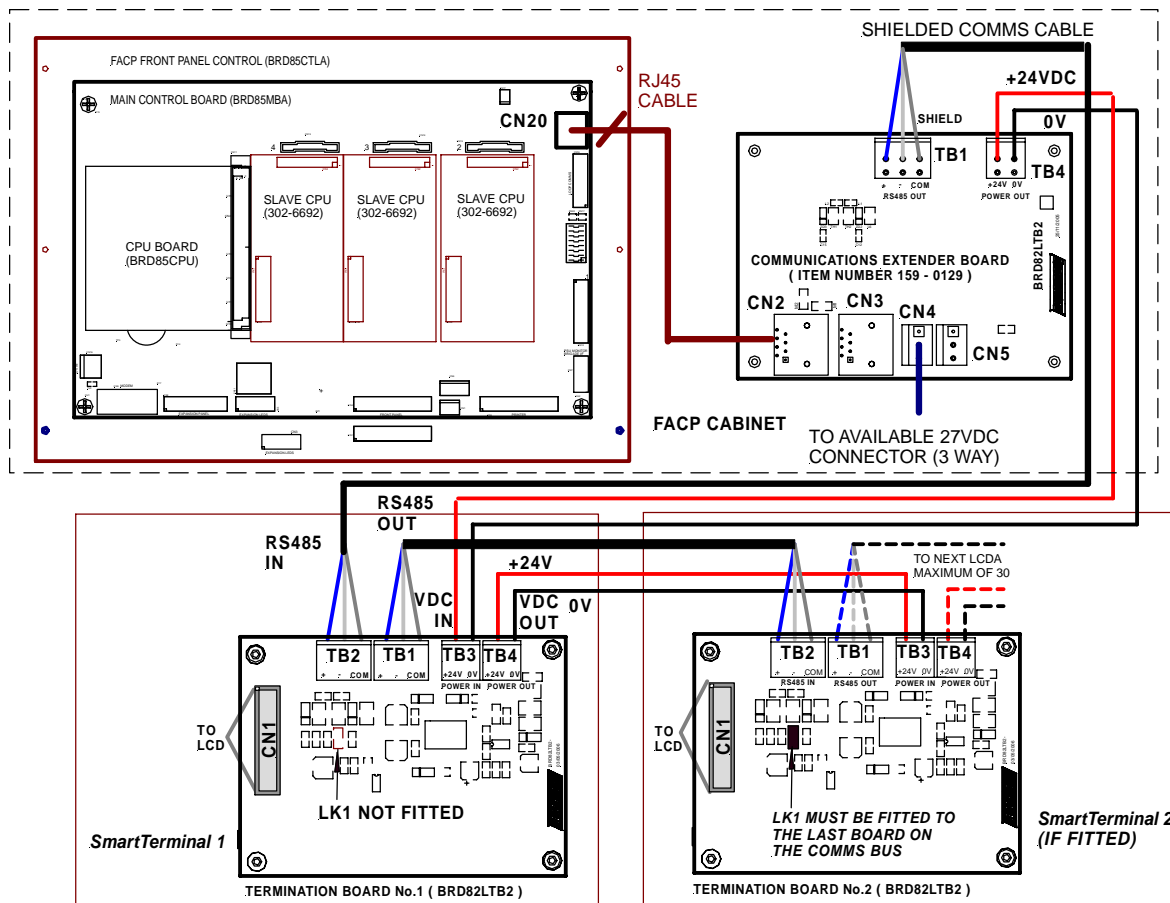


Figure 7: Connecting the **SmartTerminal** to the FACP

6.1 **SmartTerminal** Termination Board Interconnection

Connector CN1 Pin Number	Purpose
1,2	0V
3, 4	+24VDC
5, 6	0V
7	TP6
8	RESET
9	TP7
10	TP8
11	TP9
12	TP10
13	RTX+
14	RTX-
15, 16	+3V3
17, 18	+5VDC
19, 20	0V

Terminal Block TB1 (RS485 OUT) TB2 (RS485 IN)	Purpose
1 (Pin Number)	RS485 +ve
2	RS485 -ve
3	SCREEN

Terminal Block TB4 (27VDC OUT) TB3 (27VDC IN)	Purpose
1 (Pin Number)	0V
2	+24VDC

6.2 FACP Communications Extender Board Interconnection

Terminal Block TB1 (RS 485 OUT) Number	Purpose
1	RS485 +ve
2	RS485 -ve
3	SCREEN

Note: CN1,CN2,CN3 and CN4 are not used and are not mounted on the PCB

Terminal Block TB4 (27VDC OUT) Number	Purpose
1	0V
2	+24VDC

Connector CN2 (IN) & CN3 (OUT)	Purpose
1 (Pin Number)	TP18
2	0V
4	RTX+
5	RTX-
7	0V
8	TP18

Connector CN4 (IN) & CN5 (OUT)	Purpose
1, 3 (Pin Number)	0V
2	+24VDC

6.3 Setting the **SmartTerminal** Address

1. Open the front door, locate the "CONFIG" button situated on the left hand side of the PCB and press for 3 seconds. The buzzer and "Config" LED will double beep and flash respectively to indicate that the Configuration mode has been entered. The LCD will now display the Configuration screen. This screen consists of the code version number, current address and four adjustment markers. These markers A-, A+, C-, and C+ are used to indicate the keys that adjust the address and LCD contrast.
2. Use the "PREVIOUS (A-) and NEXT" (A+) keys to select the desired address. The default value for this address is 255 which is not a valid **SmartTerminal** address. The user must then select an address value from 1 to 30, ie the same address as that set in the FACP. The keys corresponding to C- (SILENCE BUZZER) and C+ (RESET) are used in a similar manner to decrease and increase the LCD contrast level. There is audible feedback for all key presses.
3. Once the address has been set press the "CONFIG" button again for 3 seconds and the screen will return to its default and the "DIAGNOSTIC" LED will return to a slow flash. This slow flash indicates **SmartTerminal** and the FACP are communicating normally ie the LED flashes if communications data is being received from the FACP.

Note: *If the address is not set within the time out period of approximately 75 seconds **SmartTerminal** will return to its previous state.*

6.4 Setting the SmartTerminal Annunciator in ConfigManager

Right click on the Controller icon and select “Edit Module Types” to bring up the following screen/s.

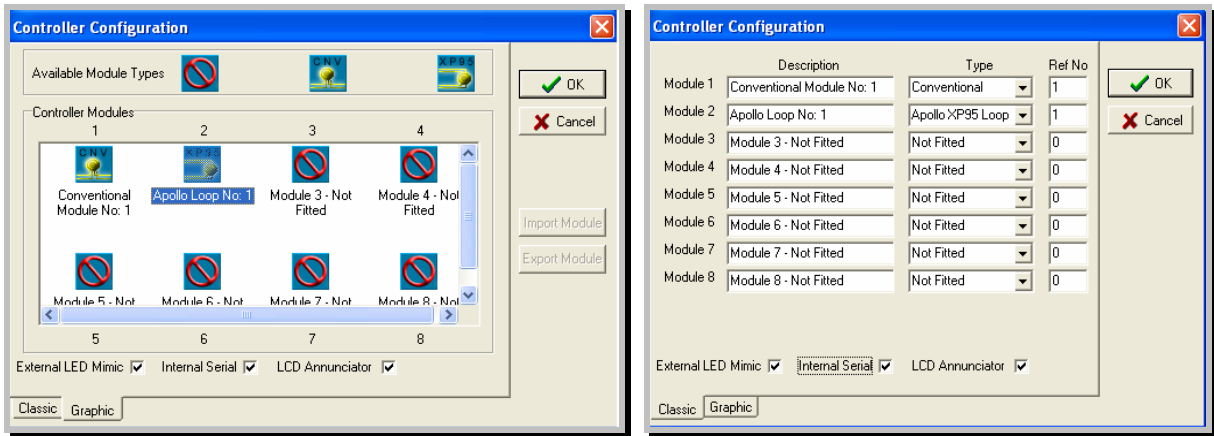


Figure 8: The Controller Edit / Add Module Types Screens (Apollo)

Click within the check box to “tick” the LCD Annunciator check box and click OK. Double click on the Controller to open the Panel screen and the LCD Annunciator tab should now be visible along with the other installed functions.

6.4.1 Setting the SmartTerminal Reporting Parameters

To set the SmartTerminal parameters click on the LCD Annunciator tab and the following screen will be displayed. Under the assigned LCDA Card designator, 1 to 30, click in the Active box to change the “N” (NO not fitted) to “Y” (YES fitted) and then enter or type in a “Description”. The description should be a name given to the SmartTerminal (LCDA) or its physical location. Double click in each of the “Report” boxes to display and set the, “Y” (Yes reports the parameter) and “N” (No does not report the parameter) “Alarms, Faults, Disables” parameters that SmartTerminal will display on each SmartTerminal at each location.

Note: A maximum of 30 SmartTerminals can be used in the configuration of the FACP.

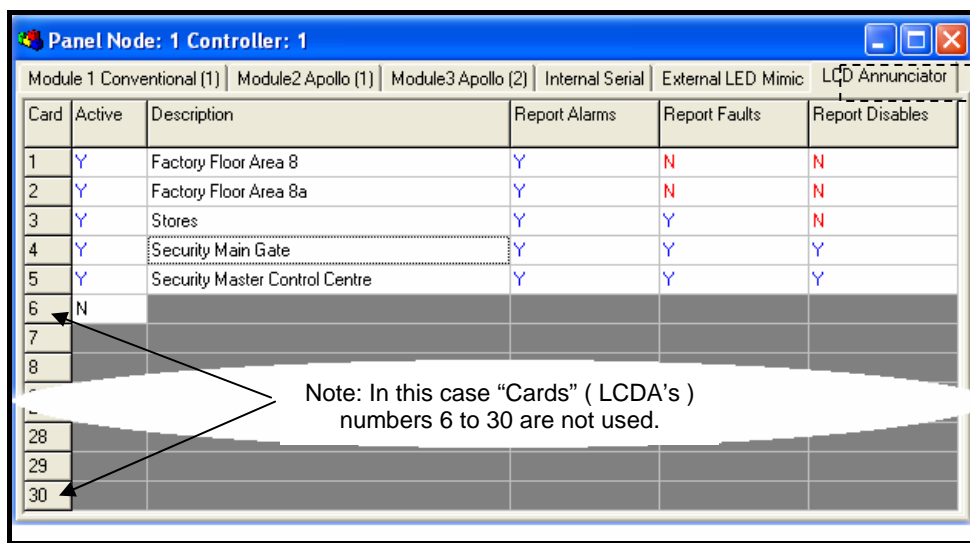


Figure 9: Example of SmartTerminal Configuration Settings Screen

In the above example **Card 1 & 2;**

- i. are active
- ii. are situated in the designated factory floor area 8
- iii. will display all Alarms
- iv. will *not* display any Faults, and
- v. will *not* display any Disables

Card 3

- i. is active
- ii. is situated in the stores area
- iii. will display all Alarms
- iv. will display any Faults, and
- v. will *not* display any Disables

Card 4 & 5

- i. are active
- ii. are situated in the security areas
- iii. will display all Alarms
- iv. will display any Faults, and
- v. will display any Disables

7 SmartTerminal Controls

All controls, except for the controls Enable / Disable keyswitch, are of a momentary push button style.

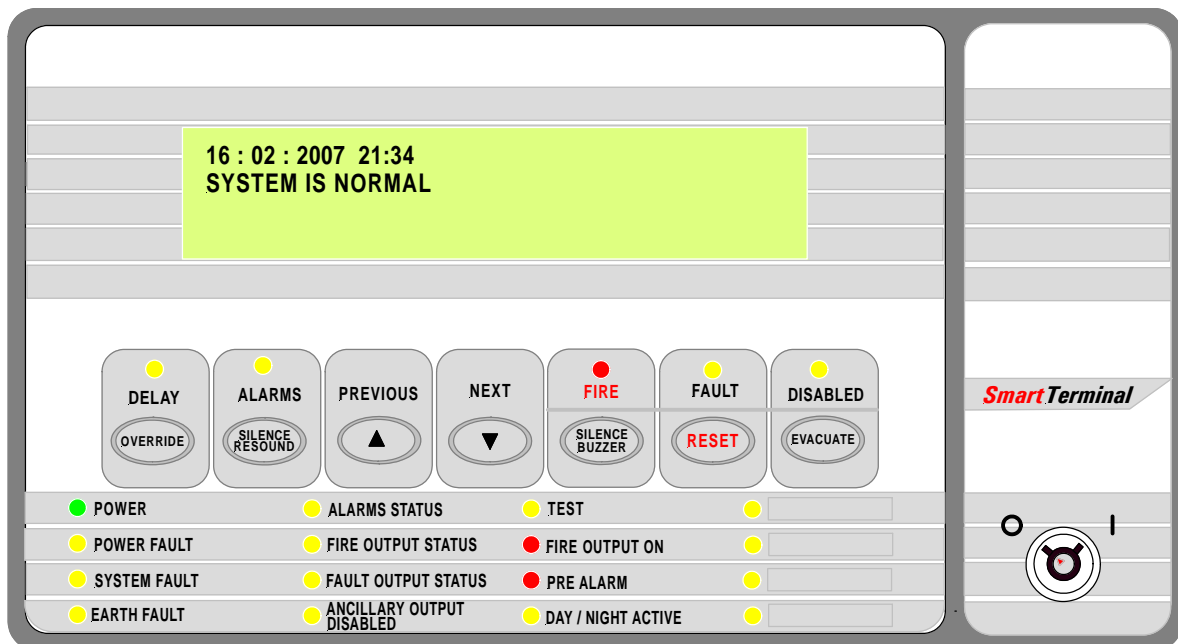


Figure 10: LCDA Front Panel Layout

7.1 Override



When zones and/or detectors are configured with delays, at the FACP then the operation of alarm devices (sounders and strobes) or the activation of the brigade alarm output can be delayed from when the zone/detector goes into alarm. The delay can be overridden by pressing the OVERRIDE key. This will cause the alarm devices and brigade output to be activated immediately

Active at access level 1 and 2.

7.2 Silence / Resound



Press to silence the alarm devices (associated LED illuminated).

Press again to re-enable the alarm devices (associated LED extinguished).

Active at access level 2 only.

7.3 Previous



Primary Function

Press to display the previously displayed LCD screen

Secondary Function

Set **SmartTerminal** address – A – (minus) decrement number

Active at access level 1 and 2

7.4 Next



Primary Function

Press to display the next displayed LCD entry

Secondary Function

Set **SmartTerminal** address – A + (plus) increment number

Active at access level 1 and 2

7.5 Silence Buzzer



Silences the panel buzzer. Buzzer is activated under the following conditions:

- ✓ Alarm condition
- ✓ Devices – missing, out of calibration, wrong type, reporting an internal error
- ✓ Loops – short circuit or open circuit
- ✓ Monitored inputs and outputs on loop devices are in fault
- ✓ Sounders – missing, wrong type or reporting an internal error
- ✓ Modules within the panel – missing, wrong type or hardware error
- ✓ Main and secondary power supply fault

In Configuration mode this key decreases the LCD contrast.

Push button – held down for 3 seconds commences a lamp test. Lamp test is to test all indicators, segments on the LCD and the buzzer.

Active at access level 1 and 2.

7.6 Reset



Returns the FACP to its power up state. This means all detectors in alarm are reset to normal and all indicators and outputs are updated accordingly.

In Configuration mode this key increases the LCD contrast.

Active at access level 2 only.


7.7 Evacuate



Turns on all alarm devices (visual and aural) outputs and activates the Fire indicator. The SILENCE / RESOUND or RESET control shall turn off all alarm devices (visual and aural).

Active at access level 2 only

7.8 Key Switch

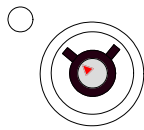

Controls enable key switch. The **SmartTerminal** by default is in access level 1, and when the control enable key switch is in the ENABLED position, the **SmartTerminal** is in access level 2. Access level 2 is used to restrict access to certain controls.

Note: the keyswitch is in the disabled position as indicated here by the small centre pointer.

8 **SmartTerminal Indicators**

8.1 Introduction

The following section details the operation of the front panel indicators on the **SmartTerminal**

8.2 Delay



The indicator is illuminated when a device has been activated and the device is configured to have a delay before operating the brigade output and alarm devices.

The indicator is turned off when the delay expires and the brigade output and alarm devices are activated or the delay is overridden by the use of the delay override.

8.3 Alarms



The indicator is illuminated when the sounders have been silenced in response to a FIRE condition, indicating the resound function is active.

8.4 Fire



The indicator is illuminated when one or more devices are reporting a fire condition and are not disabled.

8.5 Fault



The indicator is illuminated when there is one or more faults on the system. Faults can be from the following sources

- ✓ Devices – missing, out of calibration, wrong type, reporting an internal error
- ✓ Loops – short circuit or open circuit
- ✓ Monitored inputs and/or outputs on loop devices in fault
- ✓ Monitored inputs and/or outputs within the FACP in fault
- ✓ Modules within the panel – missing, wrong type or hardware error
- ✓ Modules or stations external to the panel – missing, wrong type or hardware error (**SmartTerminal**)
- ✓ Main and secondary supplies

8.6 Disabled



The indicator is illuminated when one or more zone detectors, loop devices or panel outputs are disabled.

8.7 Power

 POWER

Illuminated to show the presence of power. Flashes when mains have failed.

8.8 Power Fault

 POWER FAULT

Illuminated when there is a fault with the power supply. Fault can be no mains, high charger voltage, low battery voltage or missing battery.

8.9 System Fault

 SYSTEM FAULT

Illuminated when the FACP is unable to provide mandatory functions. Indicator is latched, until cleared by reset.

8.10 Earth Fault

 EARTH FAULT

Illuminated when there is an earth fault detected on the panel.

8.11 Alarm Status

 ALARMS STATUS

Illuminated steady if any of the alarm devices (sounders and/or strobes) have been disabled, and flashes if any of the alarm devices (sounders and/or strobes) are in fault. Disable has priority over fault.

8.12 Fire Output Status

 FIRE OUTPUT STATUS

Illuminated steady if the fire output has been disabled and flashes if the fire output is in fault (open or short circuit condition). Disable has priority over fault.

8.13 Fault Output Status

 FAULT OUTPUT STATUS

Illuminated steady if the fault output has been disabled, and flashes if the fault output is in fault (open or short circuit condition). Disable has priority over fault.

8.14 Ancillary Output Disabled

 ANCILLARY OUTPUT
DISABLED


Illuminated when the ancillary output has been disabled.

8.15 Test

 TEST

Illuminated when the FACP is in the test mode. Possible tests are fire, fault, walk, lamp and loop test.

8.16 Fire Output On

 FIRE OUTPUT ON

Illuminated when the FIRE output is active as a result of a fire condition

8.17 Prealarm

 PRE ALARM

Illuminated when one or more devices are in the pre-alarm condition and not disabled

8.18 Day / Night Active

 DAY / NIGHT ACTIVE

Illuminated when day / night facility has been enabled on the FACP

8.19 Programmable



Programmable 1 to 4 – *For future use*

9 SmartTerminal Screen Format

9.1 Introduction

There are 3 events that can be reported and displayed by **SmartTerminal**. The types of event are;

1. Fire
2. Faults and
3. Disables.

The types of events are only associated with sensors and detectors hence faults associated with modules, loops O/C – S/C, power supplies and so forth are not reported on the LCD.

The **SmartTerminal** has front panel indicators for each type of event. When the **SmartTerminal** is configured not to report a type of event and that event type is present (and the corresponding front panel indicator is illuminated on the **SmartTerminal**), then a standard information screen is displayed on the LCD stating the system is not normal and the operator should see the FACP.

9.2 Alarm

If configured the screen format for reporting loop / sensor / zone fire condition is:

LCD Line Number	Information
1	Device descriptor (up to 33 characters) Type Descriptor (up to 6 characters)
2	Loop address and zone number(Lxx Syyy.zz Zwww) current device status
3	Date and Time of occurrence (DD/MM/YYYY HH:MM:SS)
4	Alarm sequence number (Device Alarms nnn of nnn)

9.3 Fault

If configured the screen format for reporting loop / sensor / zone fault condition is:

LCD Line Number	Information
1	Device descriptor (up to 33 characters) Type Descriptor (up to 6 characters)
2	Loop address and zone number(Lxx Syyy.zz Zwww) current device status
3	Blank
4	Fault sequence number (Device Fault nnn of nnn)

Note: The fault types only relate to devices.

In the event of a loss of communications, for a period of greater than 15 seconds the LCDA will default to the No Communications screen. The format for this screen is:

LCD Line Number	Information
1	No Communications
2	
3	
4	

9.4 Device Isolate / Disables

If configured the screen format for reporting loop / sensor / zone disable condition is:

LCD Line Number	Information
1	Device descriptor (up to 33 characters) Type Descriptor (up to 6 characters)
2	Loop address and zone number(Lxx Syyy.zz Zwww) current device status
3	Blank
4	Disable sequence number (Device Disables nnn of nnn)

9.5 Pre-alarm

If configured the screen format for reporting loop / sensor / zone Pre-alarm condition is:

LCD Line Number	Information
1	Loop address and zone number(Lxx Syyy.zz Zwww)
2	Pre-alarm descriptor (up to 15 characters)
3	Line is left blank
4	Pre-alarm sequence number (Device Pre-alarms nnn of nnn)

9.6 Normal / Default

The format for reporting that everything is normal is:

LCD Line Number	Information
1	Current Date and Time (DD/MM/YYYY HH:MM)
2	System Status
3	Blank
4	Blank

The screen is only displayed when there are no alarms, fault or disables on the panel.

The default screen is only displayed when there are no device alarms, device faults or device disables present on the system. The highest priority current system status will be displayed and can be one of the following listed in order of highest to lowest priority:

1. "SYSTEM EVACUATE"
2. "SYSTEM ALARM"
3. "SYSTEM PRE-ALARM"
4. "SYSTEM FAULT"
5. "SYSTEM DISABLE"
6. "SYSTEM NORMAL"

9.7 Config

The Config screen displays the following

LCD Line Number	Information
1	VX.X (This is the code software version number)
2	Address
3	
4	A - A + C - C+

A - A + : adjusts the address 1 to 30, 30 being the maximum number of **SmartTerminals** that can be connected to the FACP, (default is 255 which is not a valid address).

The function keys perform the following; A – press "Previous" A+ press "Next"

C - C+: decreases [-] and increases [+] the LCD contrast level.

The function keys perform the following; C – press "Silence Buzzer" C+ press "Reset"

10 Trouble Shooting Chart

Problem	Solution
Normal Supply LED not illuminated	Check supply voltage it should be set to 27.2VDC. Nominal fault voltages are; Low = (< 18VDC) High = (> 28VDC)
FACP Earth Fault LED illuminated	Check all input and output cabling and wiring assemblies for short to ground
FACP System Fault LED illuminated	Ensure correct panel configuration Check all connections for loose wiring
RS485 Communication Bus not working	Refer FACP LCD. This may identify where there is a break in the communication line Check the SmartTerminal Diagnostic Config LED is flashing. If not the FACP is not communicating with the SmartTerminal . Check the RS485 cabling. If flashing check the SmartTerminal address.



Europe

SmartTerminal Installation Commissioning & Operation



www.ampac.net

**AUSTRALIA
AMPAC TECHNOLOGIES PTY LTD**

97 Walters Drive
Osborne Park 6017
Western Australia

Tel: +61 8 9242 3333
Fax: +61 8 9242 3334
Email: info@ampac.net

**EUROPE
AMPAC EUROPE LTD.**

Unit 18, West Moor Park,
Networkcentre,
Doncaster
England DN3 3GW

Tel: +44 (0) 1302 833 522
Fax: +44 (0) 1302 835 021
Email: info.eu@ampac.net

**NEW ZEALAND
AMPAC INDUSTRIES LTD.**

Unit 4, 101 Diana Drive
Glenfield, Auckland
New Zealand

Tel: + 64 9 443 8072
Fax: +64 9 443 8073
Email: info.nz@ampac.net



UNCONTROLLED DOCUMENT

NOTE: Due to Ampac's commitment to continuous improvement specifications may change without notice.